

## Items Supplied >

### SADDLEBAG KIT (P/N: 02-6136)

2 – Saddlebag Supports (Left / Right)

### MOUNT KIT (P/N: 02-6136M)

2 – Frame Mount Bracket (Left / Right)

6 – Spacer

2 – M8 x 20mm Flathead Allen Bolt

2 – M8 x 16mm Flathead Allen Bolt

4 – M8 x 20mm Buttonhead Bolt w/ Lock Patch

## Application(s) >

HONDA VT1300 CR

2010-2015

## Instruction Manual >

02-6136 / 02-6136M

Page 1 of 2

### READ ALL INSTRUCTIONS CAREFULLY AND COMPLETELY BEFORE INSTALLING!

#### Installation instructions for saddlebag supports installed with mounting kit (P/N: 02-6136M).


1. Remove the license plate. Then remove the (2) bolts securing the top chrome cover between the turn signals; the bolts are located on the underside of the bottom plastic cover. Disconnect the wire connectors for the license light, tail light and rear turn signals. Remove the (3) flange nuts securing the assembly to the fender subframe. Remove the assembly components leaving only the (3) studs exposed.
2. Pull and remove the battery/electrical covers from the both sides of the motorcycle.
3. Remove the seat by first removing the (1) bolt under the rear of the seat. Where the covers were removed in Step 1, locate and remove the (2) bolts securing the underside of the seat. Pull the seat back and up to remove.
4. Remove the (2) plastic fasteners that secure the front end of the rear fender. NOTE: Depress the center pin on the fasteners to release. Carefully remove the fender.
5. Attach the left frame mount bracket to the threaded bungs in the fender subframe. The M8 X 20mm flathead allen bolt and supplied spacer are for the front mounting hole of the bracket. See Figure 1. The M8 x 16mm flathead allen bolt is for the rear mounting hole of the bracket. See Figure 1. Fully tighten the bolts. **NOTE: The brackets will have an "L" or "R" indicating which are left and right. Be sure to attach the brackets to the correct side of the bike or the bracket will contact the rear brake caliper.** Attach the right frame mount bracket in the same way.
6. Reinstall the fender and secure with the two fasteners removed in Step 4. NOTE: To reinstall fasteners pull the center pin out; insert into holes then push the pin flush. Reinstall the license plate/rear turn signal assembly in the reverse order of removal.
7. Install the saddlebag supports onto the frame mount brackets using the (4) M8 x 20mm buttonhead bolts w/ lock patch and the spacers (which are supplied with the mount kit P/N: 02-6136M). The spacers go between the saddlebag supports and the frame mount brackets. See Figure 1.
8. Reinstall the seat in the reverse order of removal. Reinstall the battery/electrical covers.

#### Installation instructions for saddlebag supports installed with the sissy bar mounts (P/Ns: 02-4636, 02-5136, 02-5636, 02-7636, or 02-8636)

1. Refer to sissy bar instructions for installation of sissy bar components.
2. Work on one side at a time. Remove the (2) M8 x 20mm buttonhead bolts securing the sissy bar mount bracket to the frame mount bracket.
3. Position the saddlebag support under the sissy bar mount bracket and align the holes. Insert the (2) M8 x 20mm bolts (from Step 2) and snug but **DO NOT TIGHTEN**. See Figure 2. Do not use any spacers between the sissy bar and saddlebag supports.
4. Repeat Steps 2 and 3 for the other side.
5. Align and adjust all brackets as needed then tighten all (4) M8 x 20mm buttonhead bolts.


\* **Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**

### Mounting With Out Sissy Bar

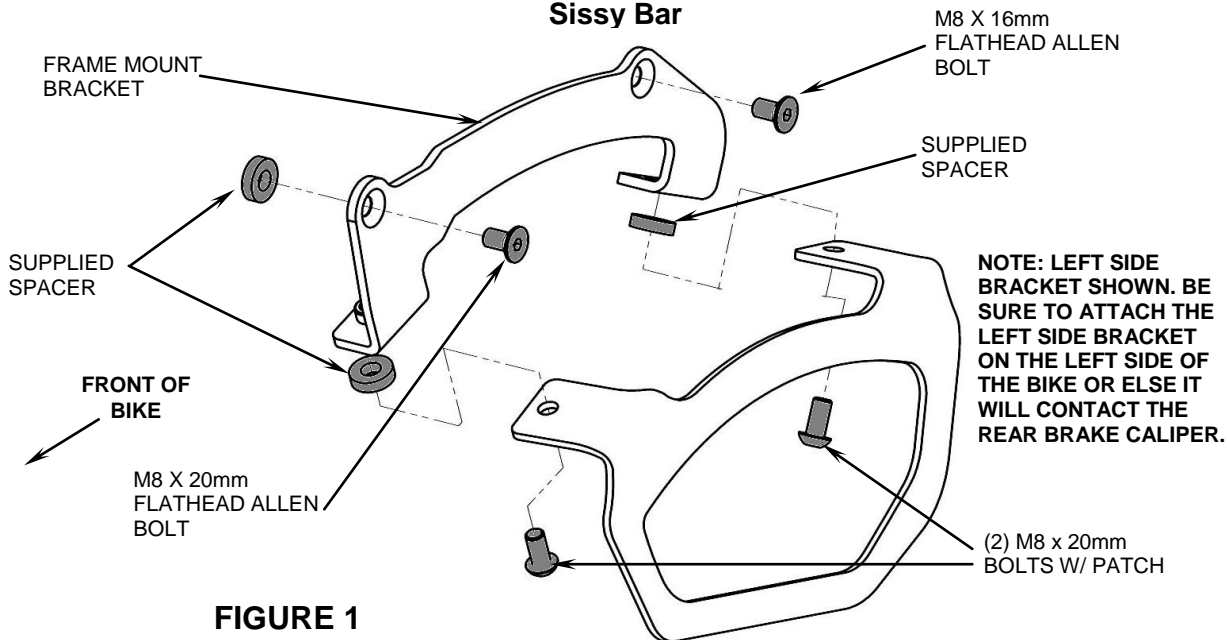

**FIGURE 1**  
LEFT SIDE SHOWN

### Mounting With Sissy Bar

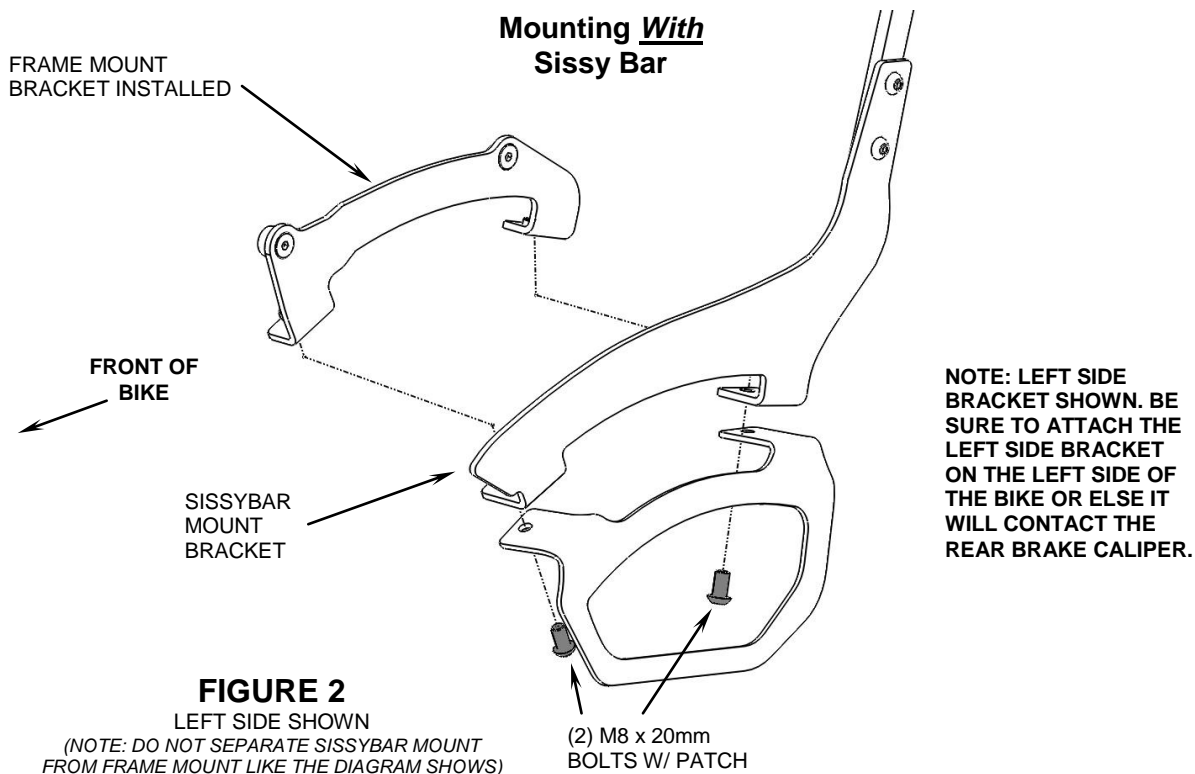

**FIGURE 2**  
LEFT SIDE SHOWN  
(NOTE: DO NOT SEPARATE SISSYBAR MOUNT FROM FRAME MOUNT LIKE THE DIAGRAM SHOWS)