

Items Supplied >

- 1 – FREEWAY BAR
- 2 – WASHERS
- 1 – M6 X 16mm BUTTONHEAD BOLT

Application >

YAMAHA V-STAR 250 2007-2019


Instruction Manual >

01-1205

Page 1 of 1

Before installing your new Cobra® Freeway bar, read all instructions carefully.

1. Remove the M10 acorn nut and washer from the left and right lower footpeg studs and set nuts aside for later use.
2. Remove M6 bolt from the horn mount at frame and set aside for later use.
3. Install your new freeway bar with the lower mounts facing to the rear and slide lower mounting brackets over studs. Rotate top of freeway bar against frame and start supplied M6 x 16mm bolt into frame where horn was removed. (See Figures 1 & 2).
4. Place (1) supplied washer and start M10 acorn nut removed in Step 1 onto both sides of freeway bar mount. Align freeway bar and tighten bolts.
5. Install horn to top freeway bar mount with M6 bolt set aside in Step 2 and tighten. Check and make sure horn works properly.
6. Torque all bolts to their factory specifications.

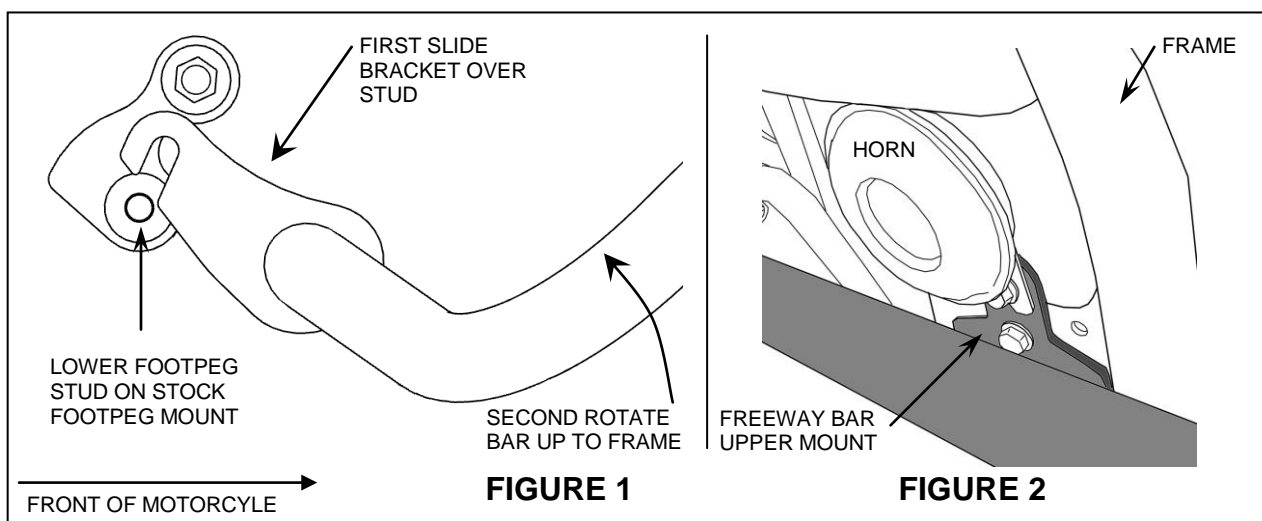

Cobra freeway bars add style to your motorcycle. They are not designed to withstand a serious impact and may not protect you and/or your motorcycle in the event of a crash.

*** Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**