

## Items Supplied >

- 1 - FORMED LUGGAGE RACK
- 4 - SPACERS
- 2 - M8 X 45mm BUTTONHEAD BOLTS
- 2 - M8 X 55mm BUTTONHEAD BOLTS

## Application(s) >

YAMAHA STRYKER 2011-2018


## Instruction Manual >

02-4270

Page 1 of 1

**Read all instructions carefully before installing your new Cobra product!**  
**Your formed luggage rack will install in just a few minutes using common tools.**

1. Remove the **FRONT** left and right M8 bolts from both fender rails and discard.
2. Install your new rack by inserting the (2) supplied M8 x 55 mm buttonhead bolts through the front rack mounting holes, (2) supplied spacers, fender rail holes and into frame. Snug bolts with rack slightly elevated in the rear to access the rear fender rail bolts.
3. Remove the (2) M8 rear fender bolts and discard. Place the (2) remaining supplied spacers against fender rails and lower the rear of rack until holes line up. Insert the (2) supplied M8 x 45mm buttonhead bolts through rack, spacers, fender rails and into frame. Check rack for proper alignment and torque all (4) bolts to their factory specifications.

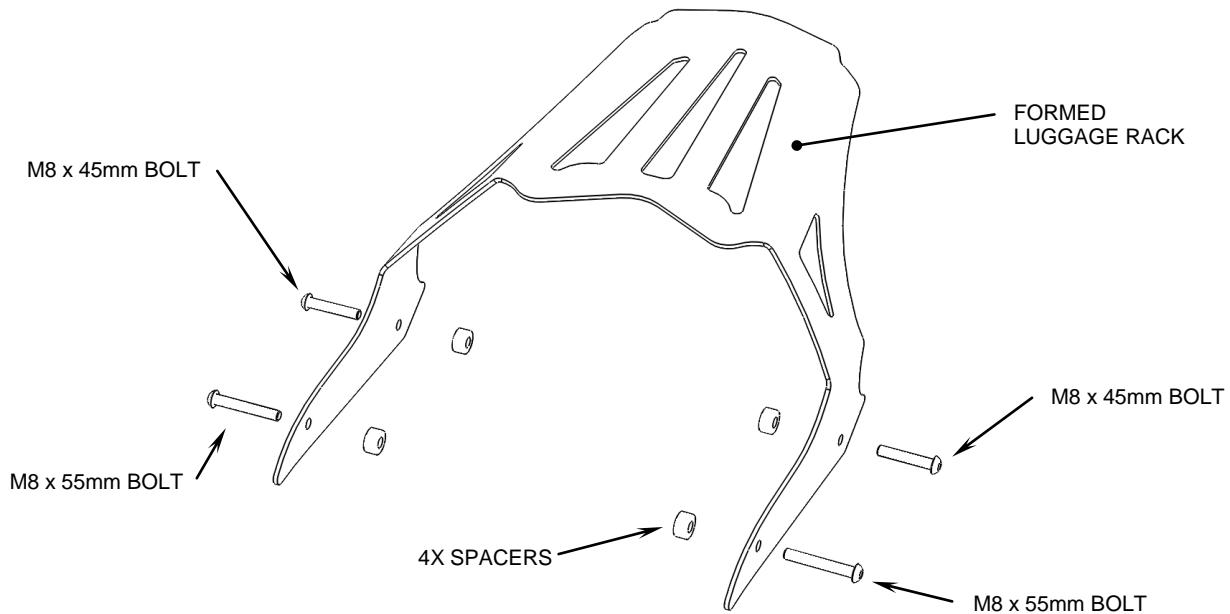

**\*Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**