

## Items Supplied >

1 - RACK

## Application(s) >

FITS THE FOLLOWING COBRA BACKRESTS:

602-2001 - SOFTAIL  
602-2004 - DYNA  
602-2005 - SPORTSTER  
602-2006 - FLDE/FLSL/FXBB 18-20  
602-2010 - FLHC/S 18-20


## Instruction Manual >

602-3500/602-3500B

Page 1 of 1

### Read all instructions carefully before installing your new Cobra® product!

1. Remove the backrest from the motorcycle and place on a soft surface so it will not get scratched.
2. Remove both side brackets from the bar.
3. Insert the rack over the bar so that the holes are aligned. See **FIGURE 1**.
4. Then install one side bracket at a time onto the rack and bar using the existing bolts. Snug the bolts but **DO NOT TIGHTEN** at this time. See **FIGURE 1**.
5. Install the backrest and rack onto the motorcycle and make sure it is seated fully on the mounting bushings.
6. Pull backward on the top of the backrest and then tighten all four bolts securely. Check the tightness of all the screws after the first ride and after the first 500 miles.

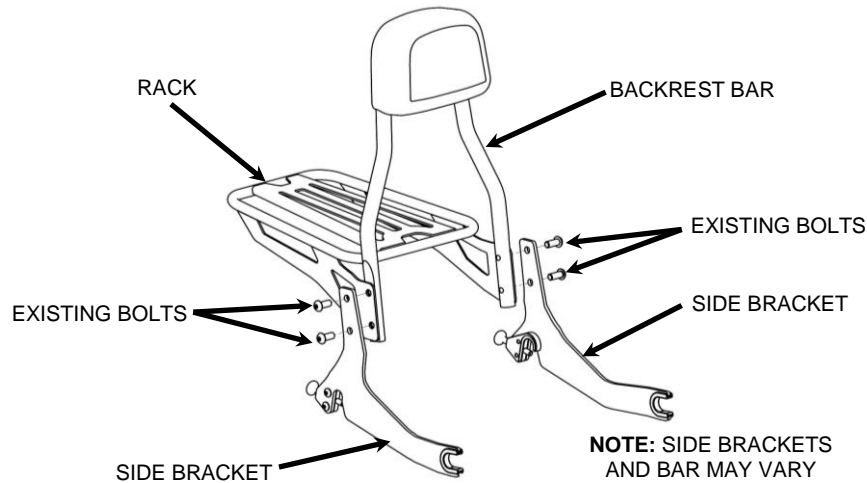

**FIGURE 1**

**DO NOT EXCEED THE MAXIMUM WEIGHT OF THE RACK  
MAX WEIGHT CAPACITY OF RACK = 10 POUNDS.**

To clean your black accessory use a liquid based soap detergent, such as dishwashing soap applied with a soft cloth and rinse with clean water. Note: Avoid abrasive cleaning methods such as granular or dry cleansers, simple green, Scotch-Brite or steel wool pads. Abrasives may breach the coating and shorten life.

\* *Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*