

Items Supplied >

- 1 – RELOCATION BRACKET
- 2 – BOLT, HEX 5/16" X 5/8"


Application(s) >

FOR USE WITH ROCKER OR SOFTAIL
SPEEDSTER SWEPT EXHAUST SYSTEM

Instruction Manual >

606-6220 / 606-6235

1. Using the stock footpeg hardware mount the stock footpeg on the supplied relocation bracket. Make sure spring washer is placed in-between the footpeg and the bracket to keep tension.
2. Use the (2) supplied 5/16 bolts to mount the relocation bracket to the exhaust mount bracket that was supplied with your Cobra exhaust system. See Figure 1.

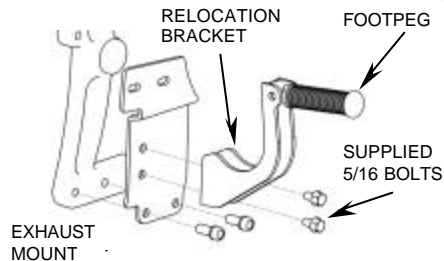

** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

DOCUMENT NO. 0019REV. B

02/09

Anything's Possible™

Items Supplied >

- 1 – RELOCATION BRACKET
- 2 – BOLT, HEX 5/16" X 5/8"


Application(s) >

FOR USE WITH ROCKER OR SOFTAIL
SPEEDSTER SWEPT EXHAUST SYSTEM

Instruction Manual >

606-6220 / 606-6235

1. Using the stock footpeg hardware mount the stock footpeg on the supplied relocation bracket. Make sure spring washer is placed in-between the footpeg and the bracket to keep tension.
2. Use the (2) supplied 5/16 bolts to mount the relocation bracket to the exhaust mount bracket that was supplied with your Cobra exhaust system. See Figure 1.

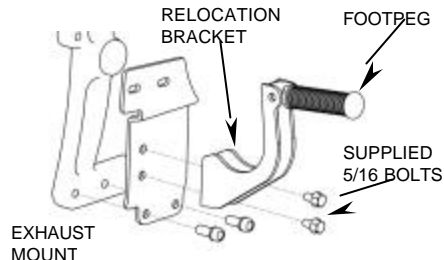

** Cobra recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.*

DOCUMENT NO. 0019REV. A

02/09

Anything's Possible™