

## Items Supplied >

- 1 – RIGHT MUFFLER ASSEMBLY
- 1 – LEFT MUFFLER ASSEMBLY
- 2 – CLAMP, 27-61MSC

## Application >

HARLEY:  
DRESSER 95-13

## Instruction Manual >

6020

Page 1 of 1

### Read all instructions carefully and completely before installing your new slip-on mufflers

1. Remove the saddlebags carefully.
2. Remove and save the mounting hardware securing the mufflers to the brackets. Loosen the stock muffler clamps then pull the stock mufflers free from the headpipes. The stock clamps will not be reused.
3. Slide the supplied 27-61MSC clamps over the slip-on mufflers and position them as shown in Figure 1 with the hex head facing the ground.
4. Slide the mufflers onto the headpipes (Cobra logo facing outward) until the mounting holes align. Fasten the mufflers using the stock mounting hardware in the same manner as stock but **do not tighten**. Verify that the gap, where the mufflers meet the stock heatshields, is similar to the gap the stock mufflers allotted.
5. Check all clearances and alignments then tighten the clamps. (NOTE: If the muffler clamp is slid past the slots on the slip collar the clamp will not tighten properly.) Tighten the mounting bolts to factory specifications.
6. Reinstall saddlebags carefully.
7. NOTE: The exhaust tips may be loosened and oriented to various positions for different visual effects.

REMOVE BOLT AND ROTATE TIP FOR DIFFERENT TIP POSITIONS

ORIENT 27-61MSC CLAMPS AS SHOWN

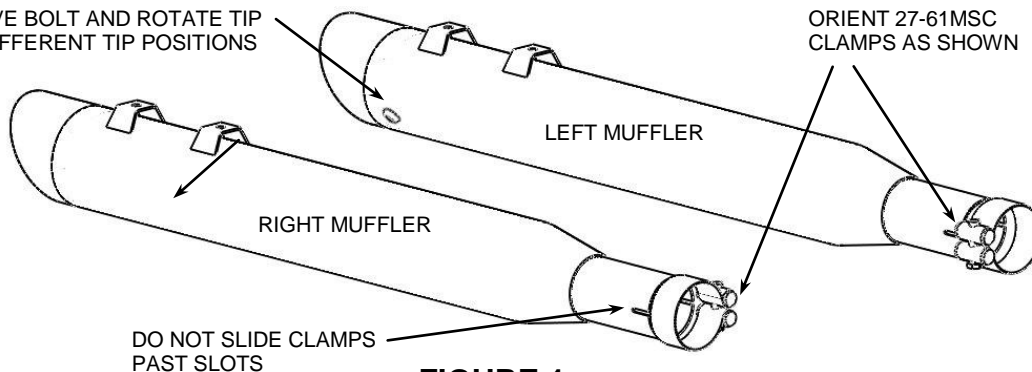


FIGURE 1

REPLACEMENT E-GLASS PACKING AND OPTIONAL 1/4" QUIET CORES CAN BE PURCHASED THROUGH YOUR DEALER OR ONLINE AT [WWW.COBRAUSA.COM](http://WWW.COBRAUSA.COM)

**IMPORTANT:** To achieve optimum performance from your new mufflers it is suggested that you install a Cobra Fi2000® Digital Fuel Processor. Visit [www.fi2000r.com](http://www.fi2000r.com)

*Before starting your engine remove all fingerprints from chrome with a quality wax or chrome polish. Failure to do so can cause discoloration. Due to fluctuations in fuel delivery settings, timing, etc., Cobra Engineering does not warrant against chrome discoloration*

California does not allow the use of aftermarket exhaust systems that remove original equipment catalysts, (except for racing use only) unless the Air Resources Board has issued an Executive Order for that system.

\* Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.