

## Items Supplied >

- 1 – SISSYBAR W/ PAD
- 2 – MOUNT BRACKET (LEFT AND RIGHT)
- 2 – BOLT, M10 x 40mm BUTTONHEAD
- 2 – BOLT, M10 x 60mm BUTTONHEAD
- 4 – BOLT, M8 x 16mm BUTTONHEAD

## Application(s) >

HONDA SHADOW RS 2010-2014

## Instruction Manual >


02-4614 / 02-5114 / 02-5614

Page 1 of 1

**Read all instructions carefully before installing your new Cobra® product!**

**Your sissy bar will install in just a few minutes using common tools.**

1. Remove and discard the (2) M8 bolts from the left side fender rail. Save the plastic washers, steel bushings and chrome cover. **NOTE:** Remove only one side of fender bolts at a time otherwise fender may fall - resulting in possible scratches or damage to fender/paint.
2. Install left sissy bar mounting bracket (part # facing inward) by inserting the longer supplied M10 x 60mm bolt through the front hole of the sissy bar mount bracket, steel bushing, plastic washer, chrome cover and into the frame. Insert the shorter supplied M10 x 40mm bolt through the rear hole of the sissy bar mount bracket, steel bushing, plastic washer, chrome cover and into the frame. **DO NOT TIGHTEN AT THIS TIME.**
3. Repeat Steps 1 & 2 on right side.
4. Install the sissy bar between the brackets using the (4) supplied M8 x 16mm buttonhead bolts.
5. Torque all (4) M10 bolts to their appropriate values. Align sissy bar and tighten all (4) M8 bolts.

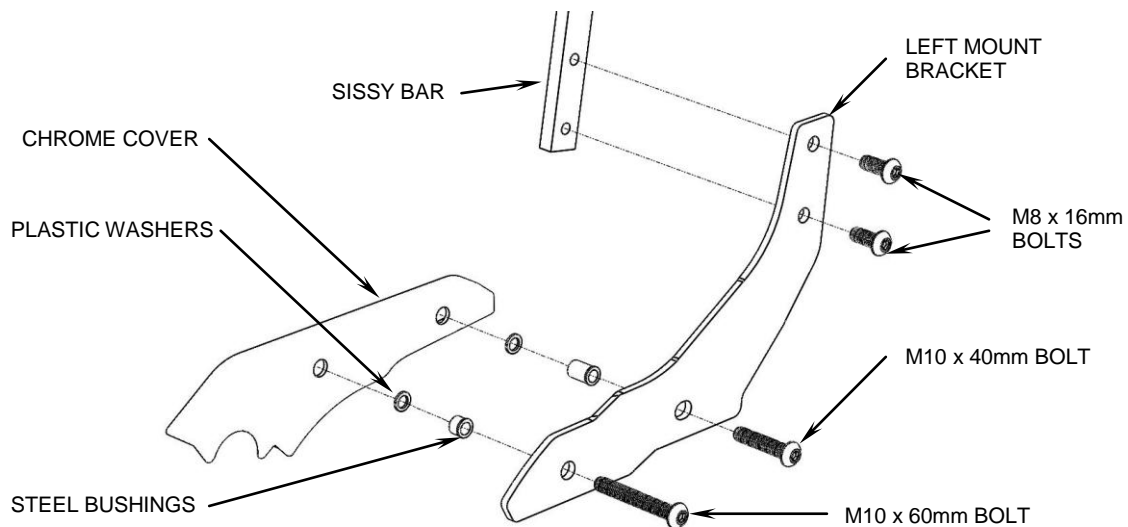

PICTURE MAY VARY FROM APPLICATION

**LEFT SIDE SHOWN**

**\* Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**