

www.cobrausa-vtwin.com

Items Supplied >

- 1 SISSY BAR WITH PAD AND INSERT
- 4 SPACERS
- 4 M8 X 45MM BUTTONHEAD BOLTS

Application(s) >	
HONDA: GROM	22-23

Instruction Manual >

02-8607B

Page 1 of 2

Read all instructions carefully and completely before installing your new Sissy Bar!

- Remove the seat carefully and set aside.
- Remove the 4 plastic covers to expose the 4 threaded mounting bosses for the sissy bar. See FIGURE 1.
- Put a soft cloth over each turn signal as shown in FIGURE 2 to protect the turn signals and the sissy bar from being scratched during the installation process.

REAR MOUNTING LOCATION (REMOVE PLASTIC **COVERS TO EXPOSE** THREADED MOUNTS)



FRONT MOUNTING LOCATION (REMOVE PLASTIC **COVERS TO EXPOSE** THREADED MOUNTS)

FIGURE 1

- 4. Apply a couple drops of blue Loctite to the threads on the end of the bolts so they are ready for installation.
- 5. Carefully position the sissy bar over the seat area and set it down lightly on the turn signals.
- 6. Place one spacer through the outer plastic on each side of the rear mounting location and then slide the sissy bar upward over the spacers to trap them in position. The smaller side of the spacer goes inward toward the threaded mounts. See FIGURE 2 & 3. NOTE: One spacer must be installed on each side at the same time as there is not enough space to insert the spacer between the bracket and the threaded mount if the sissy bar is in the installed position.
- Align the rear holes on the sissy bar bracket with the holes in the spacers and insert the bolts through the bracket, spacer, and into the threaded mounts. Thread in the bolts halfway so it holds the backrest in position but do not tighten at this time. See FIGURE 3.
- 8. Tilt the sissy bar forward so there is clearance to place the spacers in the front mounting areas. See FIGURE 3.


* Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.

1

DOCUMENT NO. 0017



www.cobrausa-vtwin.com

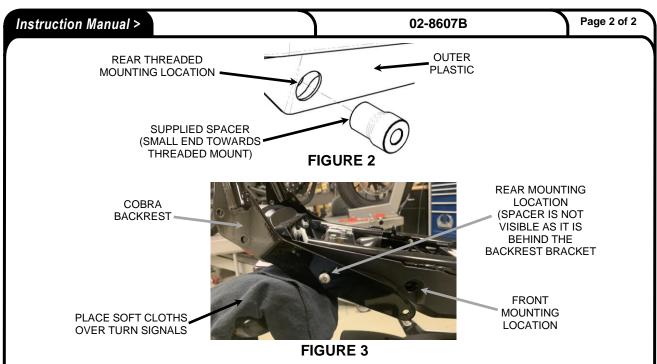

- 9. Place one spacer through the outer plastic on each side of the front mounting location and then tilt the sissy bar backward to trap the spacers between the sissy bar bracket and the threaded mounts. The smaller side of the spacer goes inward toward the threaded mounts. NOTE: One spacer must be installed on each side at the same time as there is not enough space to insert the spacer between the bracket and the threaded mounts if the sissy bar is in the installed position. Align the holes and insert the bolts through the bracket, spacer, and into the threaded mounts on both sides. Thread the bolts in halfway but do not tighten at this time. See FIGURE 4.
- 10. Slowly tighten all the bolts a little at a time starting with the rear bolts first then the front bolts. Make sure the spacers are sitting flush against the threaded mounts and the sissy bar bracket. See **FIGURE 4.**
- 11. Install the seat on the bike.
- 12. Check the tightness of all the bolts after the first ride and after the first 500 miles.

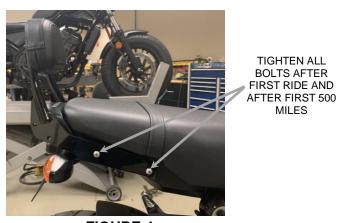


FIGURE 4

To clean your black accessory use a liquid based soap detergent, such as dishwashing soap applied with a soft cloth and rinse with clean water. Note: Avoid abrasive cleaning methods such as granular or dry cleansers, simple green, Scotch-Brite or steel wool pads. Abrasives may breach the coating and shorten life.