

Items Supplied >

- 2 – PASSENGER FLOORBOARD ASSEMBLY (L & R)
- 2 – BOLT, M6-1.0 x 35mm HEX FLANGE
- 2 – WASHER, M6
- 2 – NUT, M6-1.0 NYLOCK

Application(s) >

YAMAHA STRYKER 2011-2018

Instruction Manual >

06-4770

Page 1 of 1

Your passenger floorboards will install in just a few minutes using common tools. Read all instructions carefully and completely before installing your new passenger floorboards.

1. Remove the cotter pin and clevis pin to remove the stock passenger footpegs.
2. Position the floorboard mounts into the stock footpeg locations. NOTE: The left side mount will have an engraved "L" identifier to help differentiate the two sides.
3. Install the floorboard assemblies using the supplied M6-1.0 x 35mm hex flange bolts, M6 washers and M6-1.0 nylock nut. See Figure 1. Fully tighten hardware.
4. If the floorboards are rotated fore to aft, after tightening the M6 nuts and flange bolts, it may be necessary to loosen the M8 buttonhead bolts retaining stock clevis bracket to make the floorboards level. If this is required, be sure to tighten all stock hardware to factory torque specifications once completed.

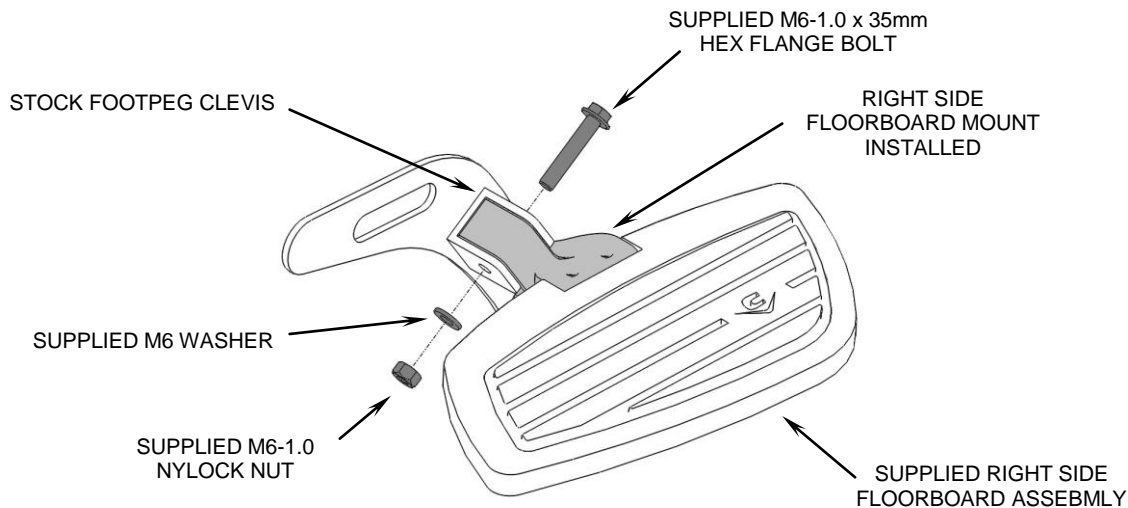


FIGURE 1
(RIGHT SIDE SHOWN)

*** Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**